


## JE-1200 INSTALLATION

Find your pickup configuration and complete the wiring of your pickups as indicated.


Locate the 6 numbered pinholes on the p.c. board used for this installation: #1 to hot lead (either with or without the tone pot) as illustrated; #2 to system ground; #3 to ground on stereo jack; #4 to battery; #5 to Mid Boost pot (prewired); #6 to Mid Boost pot (prewired). NOTE: ALL GROUNDS AND SYSTEM GROUNDS ARE COMMON AND SHOULD BE CONNECTED TOGETHER.

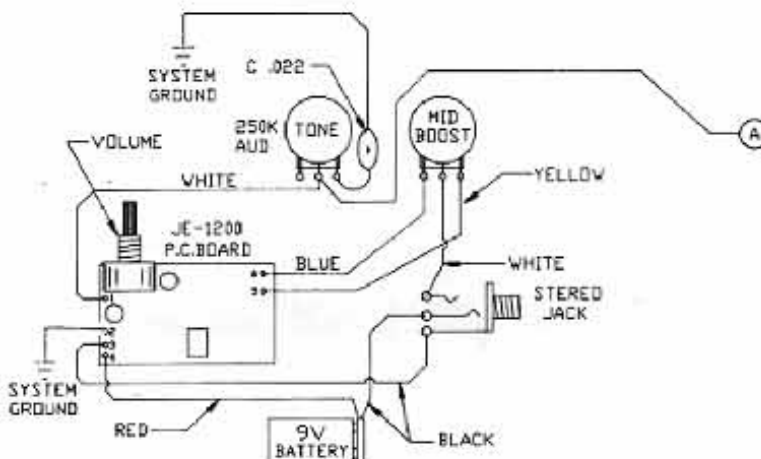


NOTE: Care must be taken when soldering connections to the circuit board to prevent solder bridging to other connections in the proximity. Double check your solder joints, both on the top and bottom of the board to verify a proper connection.

IF YOU DO NOT POSSESS GOOD SOLDERING SKILLS, REFER THIS JOB TO A QUALIFIED PERSON. FAILURE TO DO SO MAY VOID YOUR WARRANTY.


### JE-1200 1H2SC W/ 5 POS. SWITCH

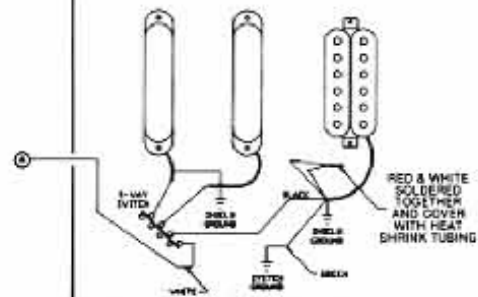

### JE-1200 3SC W/ 3 MINI SWITCHES

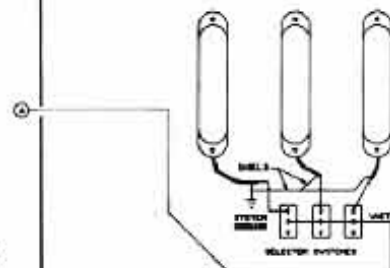

### JE-1200 2H W/ GIBSON SWITCH

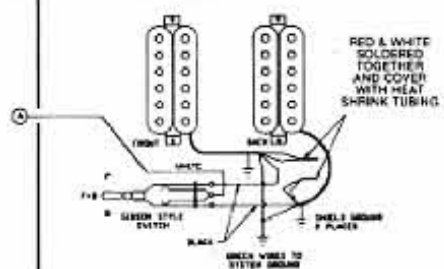

### JE-1200 1H STRAIGHT HOOKUP

