


JE-2000 INSTALLATION



JE-2000 PJ

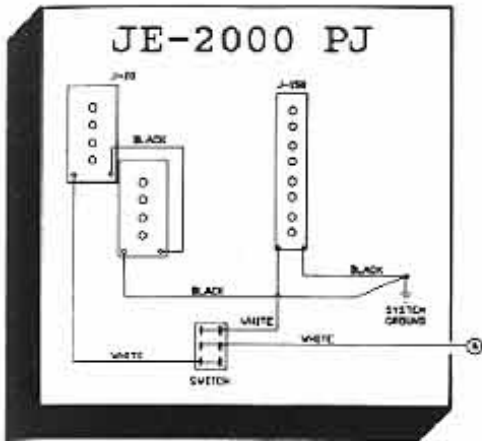

Find your pickup configuration and complete the wiring of your pickups as indicated.

Locate the 11 numbered pinholes on the p.c. board. The ones used for this installation are: #1 to hot lead "A" as illustrated; #2 to system ground; #3 to ground on stereo jack; #4 to battery; #5 thru #10 to e.q. pots (prewired); #11 to tip connection on stereo jack. **NOTE: ALL GROUNDS AND SYSTEM GROUNDS ARE COMMON AND SHOULD BE CONNECTED TOGETHER.**

JE-2000 PH

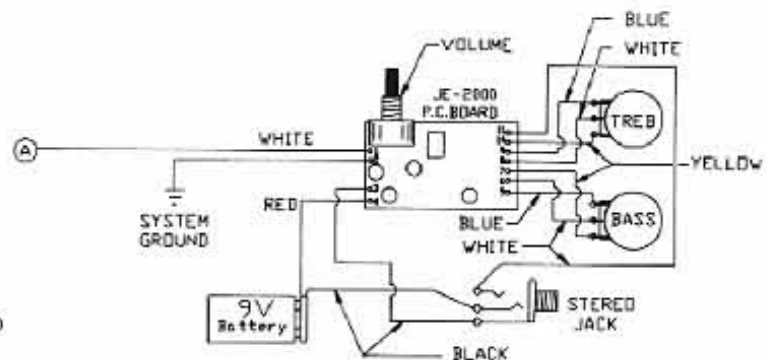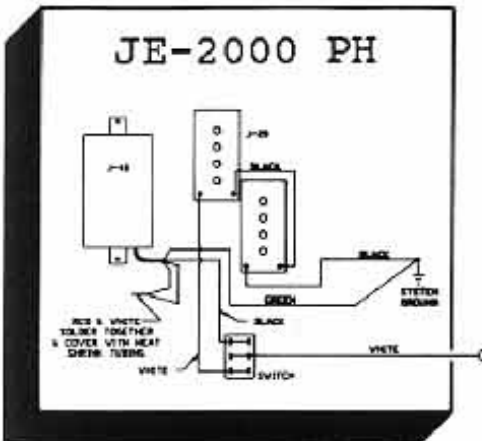

NOTE: Care must be taken when soldering connections to the circuit board to prevent solder bridging to other connections in the proximity. Double check your solder joints, both on the top and bottom of the board to verify a proper connection.

IF YOU DO NOT POSSESS GOOD SOLDERING SKILLS, REFER THIS JOB TO A QUALIFIED PERSON. FAILURE TO DO SO MAY VOID YOUR WARRANTY.

JE-2000 P

